


## Oil-Only DrumTop Pads #BTOP - 22", 25 pads/package

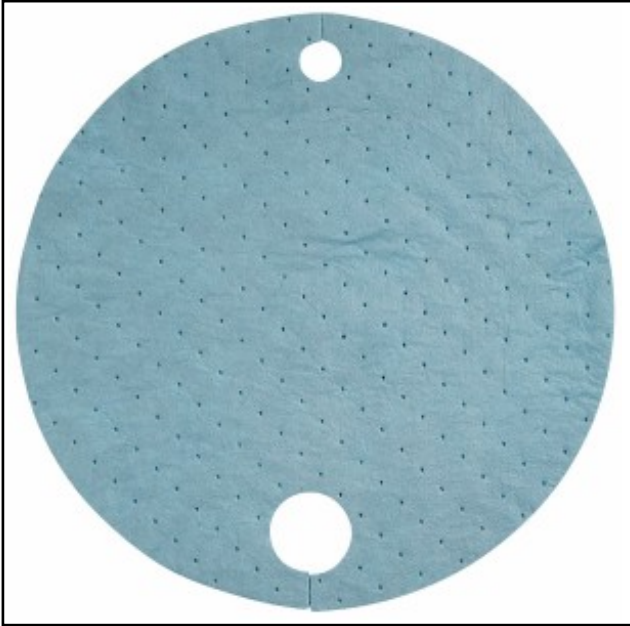

Eliminate messy drum tops with these Sorbent Oil-Only DrumTop Pads.

- Absorb drips from leaking pumps and help keep drum storage areas looking good
- Pre-cut bung holes make for easy access to drum
- Pads can be removed and replaced with pumps and valves installed
- Made from top-quality FineFiber Mat
- Color-coding helps you visually identify the right sorbent for your needs. Blue designates Oil-Only sorbency for oil and other petroleum-based fluids — but not water; fits into many professional surroundings.

### BTOP Specifications

<b>Dimensions:</b>	ext. dia. 22"
<b>Shipping Dimensions:</b>	23" W x 23" L x 4" H
<b>Sold as:</b>	25 pads per package
<b>Color:</b>	Blue
<b>Composition:</b>	Polypropylene
<b>Absorbency:</b>	Up to 8.6 gal. per package
<b>Absorbency per:</b>	Up to 44 oz. per pad
<b>Weight:</b>	7 lbs.
<b># per Pallet:</b>	72
<b>Basis Weight:</b>	HeavyWeight
<b>Incinerable:</b>	Yes
<b>Ship Class:</b>	175

### Metric Equivalent Specifications

<b>Dimensions:</b>	ext. dia. 55.9cm
<b>Shipping Dimensions:</b>	58.4cm W x 58.4cm L x 10.2cm H
<b>Dimensions:</b>	
<b>Absorbency:</b>	Up to 32.6 L per package
<b>Absorbency per:</b>	Up to 1.3 L per pad
<b>Weight:</b>	3.2 kg

## BTOP Technical Information

### Warnings & Restrictions:

There are no known warnings and restrictions for this product.

### Regulations and Compliance:

29 CFR 1910.22(a)(2) - Floors in your workplace should be, "maintained in a clean and, so far as possible, a dry condition."

29 CFR 1910.1450(e) - OSHA requires containment and cleanup materials for spills in laboratories to reduce occupational exposure to hazardous chemicals.

29 CFR 1910.120(j)(1) - Under an OSHA requirement, "DOT-specified salvage drums or containers and suitable quantities of proper absorbents shall be kept available and used in areas where spills, leaks, or ruptures may occur."

29 CFR 1910.107(g)(2) - OSHA requires spraying areas to be "kept as free from the accumulation of deposits of combustible residues as practical."

29 CFR 1910.107(b)(3) - If floors in a spray booth or work area are combustible, they "shall be covered with noncombustible material of such character as to facilitate the safe cleaning and removal of residues."

### Technical Documents:

(Available at [spilltech.com](http://spilltech.com))

Product Data Sheet (PDS)

Safety Data Sheet (SDS)



**SpillTech**

Online:  
[spilltech.com](http://spilltech.com)

Phone:  
**1-800-228-3877 (N.Am.)**  
**1-770-475-3877 (Other)**

Fax:  
**1-800-872-3764 (N.Am.)**  
**1-770-410-1812 (Other)**

Email:  
[sales@spilltech.com](mailto:sales@spilltech.com)